## Event Relay Configuration Guide

Version: 1.02

Last Updated: 28-06-2016



### **BEFORE YOU BEGIN**

### **Technical Support**

If you cannot find the answer to your question in this manual or in the Help files, we recommend you contact your system installer. Your installer is familiar with your system configuration and should be able to answer any of your questions.

Should you need additional information, please call our Technical Support Help desk, Monday to Friday 9:00 AM to 6:00 PM (GMT +8:00)

Method Details Phone + 60 (3) - 8068 1929 Fax + 60 (3) - 8068 1922 Internet www.entrypass.net Email <u>support@entrypass.net</u>



## Event Relay Setting Configuration











Name	Main Door		1		
Description			-		
Description	Main Door				
Model	N5200	-	1. Se	lect 'Event Relay	Setting'
Address	192.168.1.10	)1		tab	
Controller 9	Setting Door Setting	Reader Alarm	Setting Input Point Setting	Output Relay Network Se	tting   Port Forv
Zone Set			Advanced Setting	Available miegand droup	
Parame	ters	Name	Description	Activated Time Zone	Criteria
Event 1		Door Forced	Door Forced Open	<u>1 - 24 Hours Active</u>	
Event 2	2			1 - 24 Hours Active	U
Event 4	,			1 - 24 Hours Ar	Π
Event 9				<u>1-24</u>	0
Enter a r	ame and			Active	0
scription f	or 'Event 1'		3 Click this bu	tton to select	0
			crite	eria	0
Event 9	)		00		0
Event	10			<u>1 - 24 Hours Active</u>	U
•					
Load	Profile			Accept	Cancel
Read hint or	Local PIN, Key Card	+ PIN and HID AG	K format here		







ame Main Door						
escription Main Door						
odel N5200	•					
143200						
ddress 192.168.1.	101					
				Se	lect 'Triage	r Mode'
Controller Setting 📔 Door Setti	ing   Reader   Alarm Settin	g   Input Poir	nt Setting∫ Output Rela		icer inggei	mode
Zone Setting Fingerprint	Event Relay Setting	Advanced	Setting Available V	/iegand 7	eature Checkli	ist
Parameters	Activated Time Zone	Criteria	Trigger	ouration (se	c)	1
Event 1	<u>1 - 24 Hours Active</u>	[Dd]	Ooff ⊙on	0		
Event 2	1 - 24 Hours Active	0	Off ⊙On	0		
Event 3	1 - 24 Hours Active	0	Off ⊙On	0		
Event 4	1 - 24 Hours Active	0	Off ⊙On	0		
Event 5	1 - 24 Hours Active	0	Off ⊙On	0		
Event 6	1 - 24 Hours Active	0	Off ⊙On	0		
Event 7	1 - 24 Hours Active	0	Off ⊙On	0		
Event 8	1 - 24 Hours Active	0	Off ⊙On	0		
Event 9	<u>1 - 24 Hours Active</u>	0	Off ⊙On	0		
Event 10	<u>1 - 24 Hours Active</u>	0	Off ⊙On	0		
					F	
			( A -		Concel	





NameMain DoorDescriptionMain DoorModelN5200Address192.168.1.10	1				
Controller Setting Door Setting Zone Setting Fingerprint	Reader Alarm Setting Event Relay Setting	g   Input Point : Advanced Se	Setting   Output atting   Available V	Enter 'Du Viega Fe	ature Checklist
Parameters	Activated Time Zone	Criteria	Trigger	Du on (sec)	
Event 1	1 - 24 Hours Active	[Dd]	Off ⊙On	10	a la
Event 2	1 - 24 Hours Active	0	Off ⊙On	0	
Event 3	1 - 24 Hours Active	0	Off ⊙On	0	
Event 4	1 - 24 Hours Active	0	Off ⊙On	0	
Event 5	1 - 24 Hours Active	0	Off ⊙On	0	
Event 6	1 - 24 Hours Active	0	Off ⊙On	0	
Event 7	1 - 24 Hours Active	0	Off ⊙On	0	
Event 8	1 - 24 Hours Active	0	Off ⊙On	0	
Event 9	1 - 24 Hours Active	0	Off ⊙On	0	
Event 10	1 - 24 Hours Active	0	Off ⊙On	0	
•					
Load Profile			Ac	cept	Cancel

**Notes:** If duration time set to '0' means system will always trigger until user perform reset. Otherwise, system will trigger based on the duration setting



Controller - Edit	_				
Name Main Door					
Description Main Door		_			
Madal					
Address I. Select 'C	Jutput Rel	ay' tab			
Zone Setting Fingerprint	Event Relay	Setting Advanced	w Caning Availat	ble Wiegand Group Featu Relay Unterwork Cawing D	re Checklist
Lontroller Setting   Door Setting	ng   Header   Ak	arm Setting   Input Po	int Setting Output	Network Setting   P	ort Forwading
General Purpose Output Tim	e Zone <u>0 - N</u>	ot Active			
Parameters				Relay 4	<u> </u>
General Purpose	2. Select	available out		No	
Alarm	No	No	No	No	
On-Board Fire Release	No	No		No	
Interlock	No	No No	No	No	
Event 1 Trigger	No	No No	No No	✓ Yes	
Event 2 Trigger	No	No No	No	No	
Event 3 Trigger	No	No No	No	No No	
Event 4 Trigger	No	No No	No	No	
Event 5 Trigger		ck 'Accept' k	outton	No	
Event 6 Trigger	<b>0.</b> Circ	sk Accept i	JUNUT	No	-
Load Profile				Accept C	ancel
Read hint on Local PIN, Key Car	d + PIN and HID	AGK format here			



# **Event Triggering State**



		FORMITSER	VER Istanualu Eu	uonj						
	Device List		and Tour Elean Plan	Ball Call Leastin	n Advanced TA	Dunamia Triagorina	Control Bonol			
mine mansaction	Device List		alu Tour (Floor Flan		n Auvanceu TA	oynamic miggening		_		
	≜≡∣⊑.	4 Q								Docked
Date	Time	Controller	Door	Zone	Point	Staff No.	Name	Card No.	Transaction	
2016/03/22	15:16:44	Main Door	Door Forced						(Hv) Event Relay Trigger	
2016/03/22	15:16:44	Main Door	Main Door						(Dd) Door is forced open	
2016/03/22	15:16:40						EntryPass		(SG) Server Log In	
2016/03/22	15:16:31	HIO							(SL) Controller Up	
2016/03/22	15:16:29	Main Door							(SL) Controller Up	
2016/03/22	15:16:28								(SI) Platform1 Server Start Up	
				<b>A</b>						
ost Name: Tan-P	r		ID Address: 102 168	1 254	System User	EntryPace	D	te/Time: Tue 22 Ma	ar 2016 15:16:50	

Notes: When door is forced open, 'Output 4' from the same controller will triggered by system through 'Event Relay Setting' function





ENTRYPASS TECHNICAL – CONFIGURATION GUIDE Copyright © Entrypass Corporation



	55 PLAT	FORM1 SEI	RVER [Standard I	Edition							
0 V											ALARM
Inline Transaction	Device Lis	at 170 List G	auard Tour Floor Pla	n Roll Call L	ocation Advanced T	A Dynamic Triggeri	ing Control Panel				
< m							-				
	°≡ L	<u> </u>									Docked
Date	Time	Controller	Door	Zone	Point	StaffNo	Name	Card No.	Transaction	_	
2016/03/22	15:19:20	Main Door	Door Forced	20116	Foint	Starrivo.	Name	Card No.	(Hw) Reset Event Relay		
2016/03/22	15:17:11	Main Door	Main Door						(Da) Door is closed		
2016/03/22	15:16:44	Main Door	Door Forced						(Hy) Event Relay Trigger		
2016/03/22	15:16:44	Main Door	Main Door						(Dd) Door is forced open		
2016/03/22	15:16:40						EntryPass		(SG) Server Log In		
2016/03/22	15:16:31	HIO							(SL) Controller Up		
2016/03/22	15:16:29	Main Door							(SL) Controller Up		
2016/03/22	15:16:28								(SI) Platform1 Server Start Up		
				<b>*</b> ····					<u> </u>		
ost Name: Tan-P	PC		IP Address: 192.16	58.1.254	System I	Jser: EntryPass		Date/Time: Tue, 22 I	Mar 2016 15:19:25		
Notes:	After	reset e	event relo	iv cont	roller 'Ou	tout 4' w	ill turn off	f (if durati	ion set to $(0')$ Oth	erwise 'Outou	ıt <b>4</b> '

**NOIES.** Allel lesel ev entrelay, controller Output 4 will furn off (it duration set to 0). Olleiwise, Oulpul 4 will turn off if the duration is end

### THANK YOU

