

# FLOOR PLAN CONFIGURATION GUIDE

Version: 1.01

Last Updated: 18-07-2016



# BEFORE YOU BEGIN

## Technical Support

If you cannot find the answer to your question in this manual or in the Help files, we recommend you contact your system installer. Your installer is familiar with your system configuration and should be able to answer any of your questions.

Should you need additional information, please call our Technical Support Help desk, Monday to Friday 9:00 AM to 6:00 PM (GMT +8:00)

### Method Details


Phone + 60 (3) - 8068 1929


Fax + 60 (3) - 8068 1922


Internet [www.entrypass.net](http://www.entrypass.net)


Email [support@entrypass.net](mailto:support@entrypass.net)




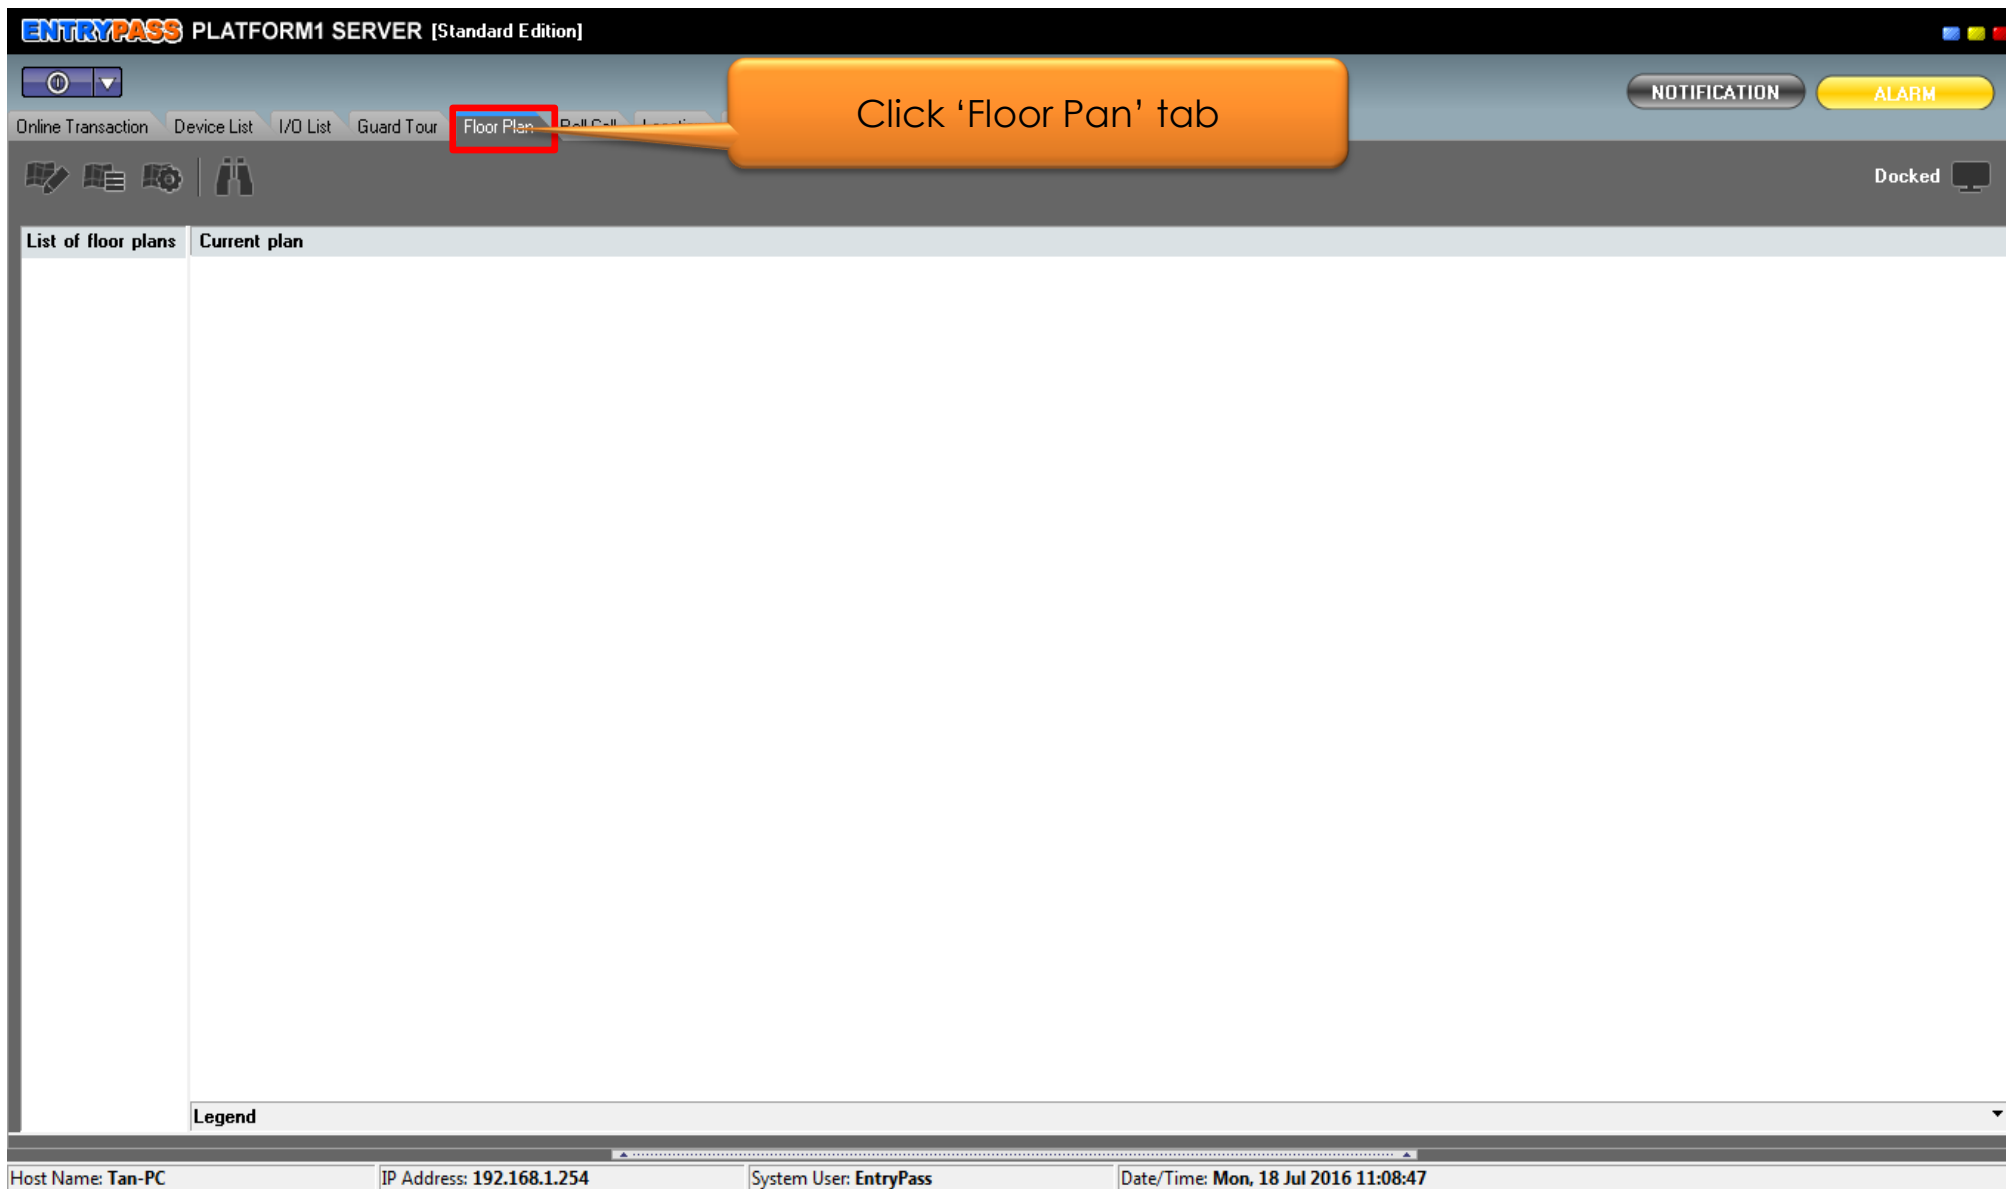


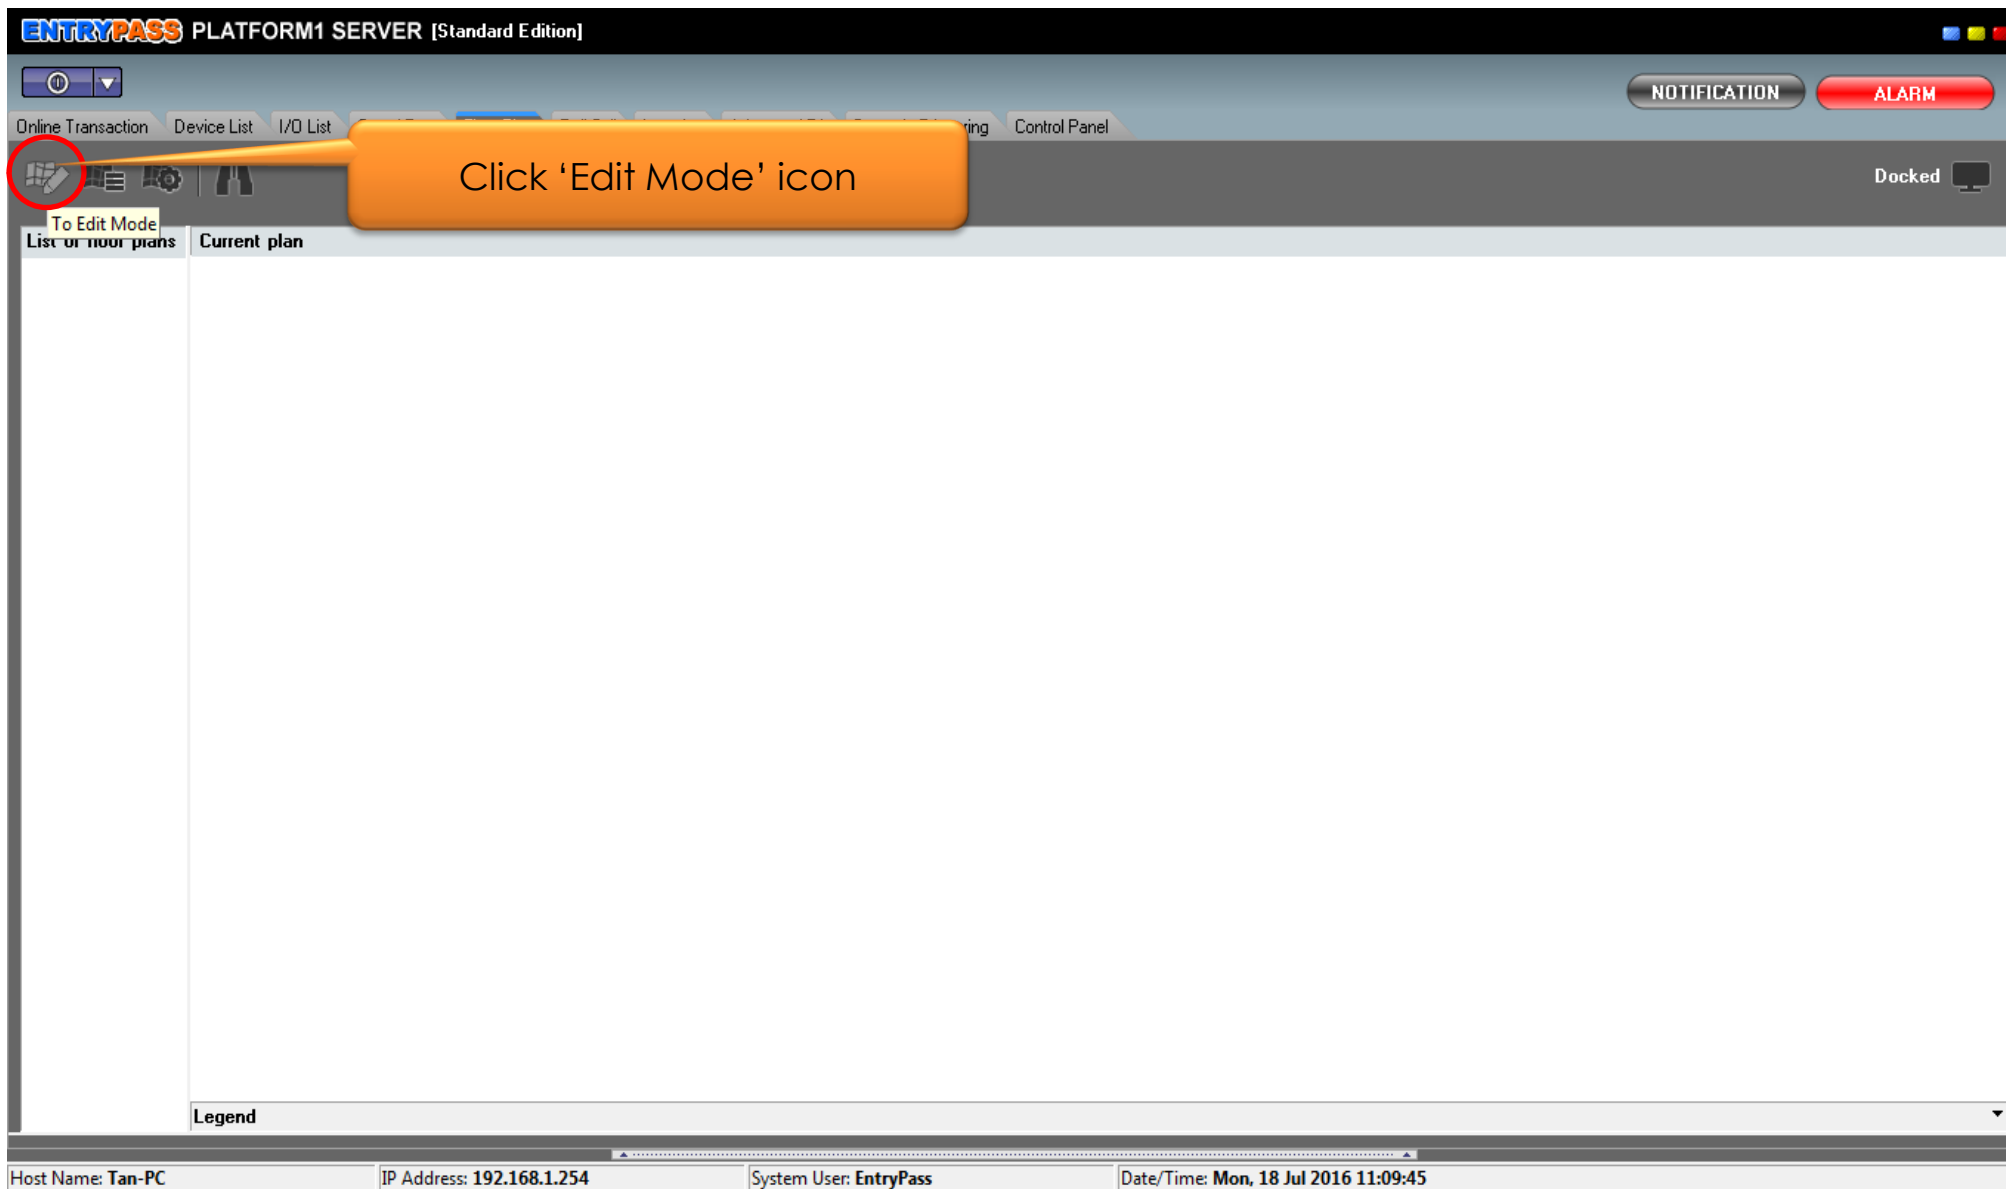

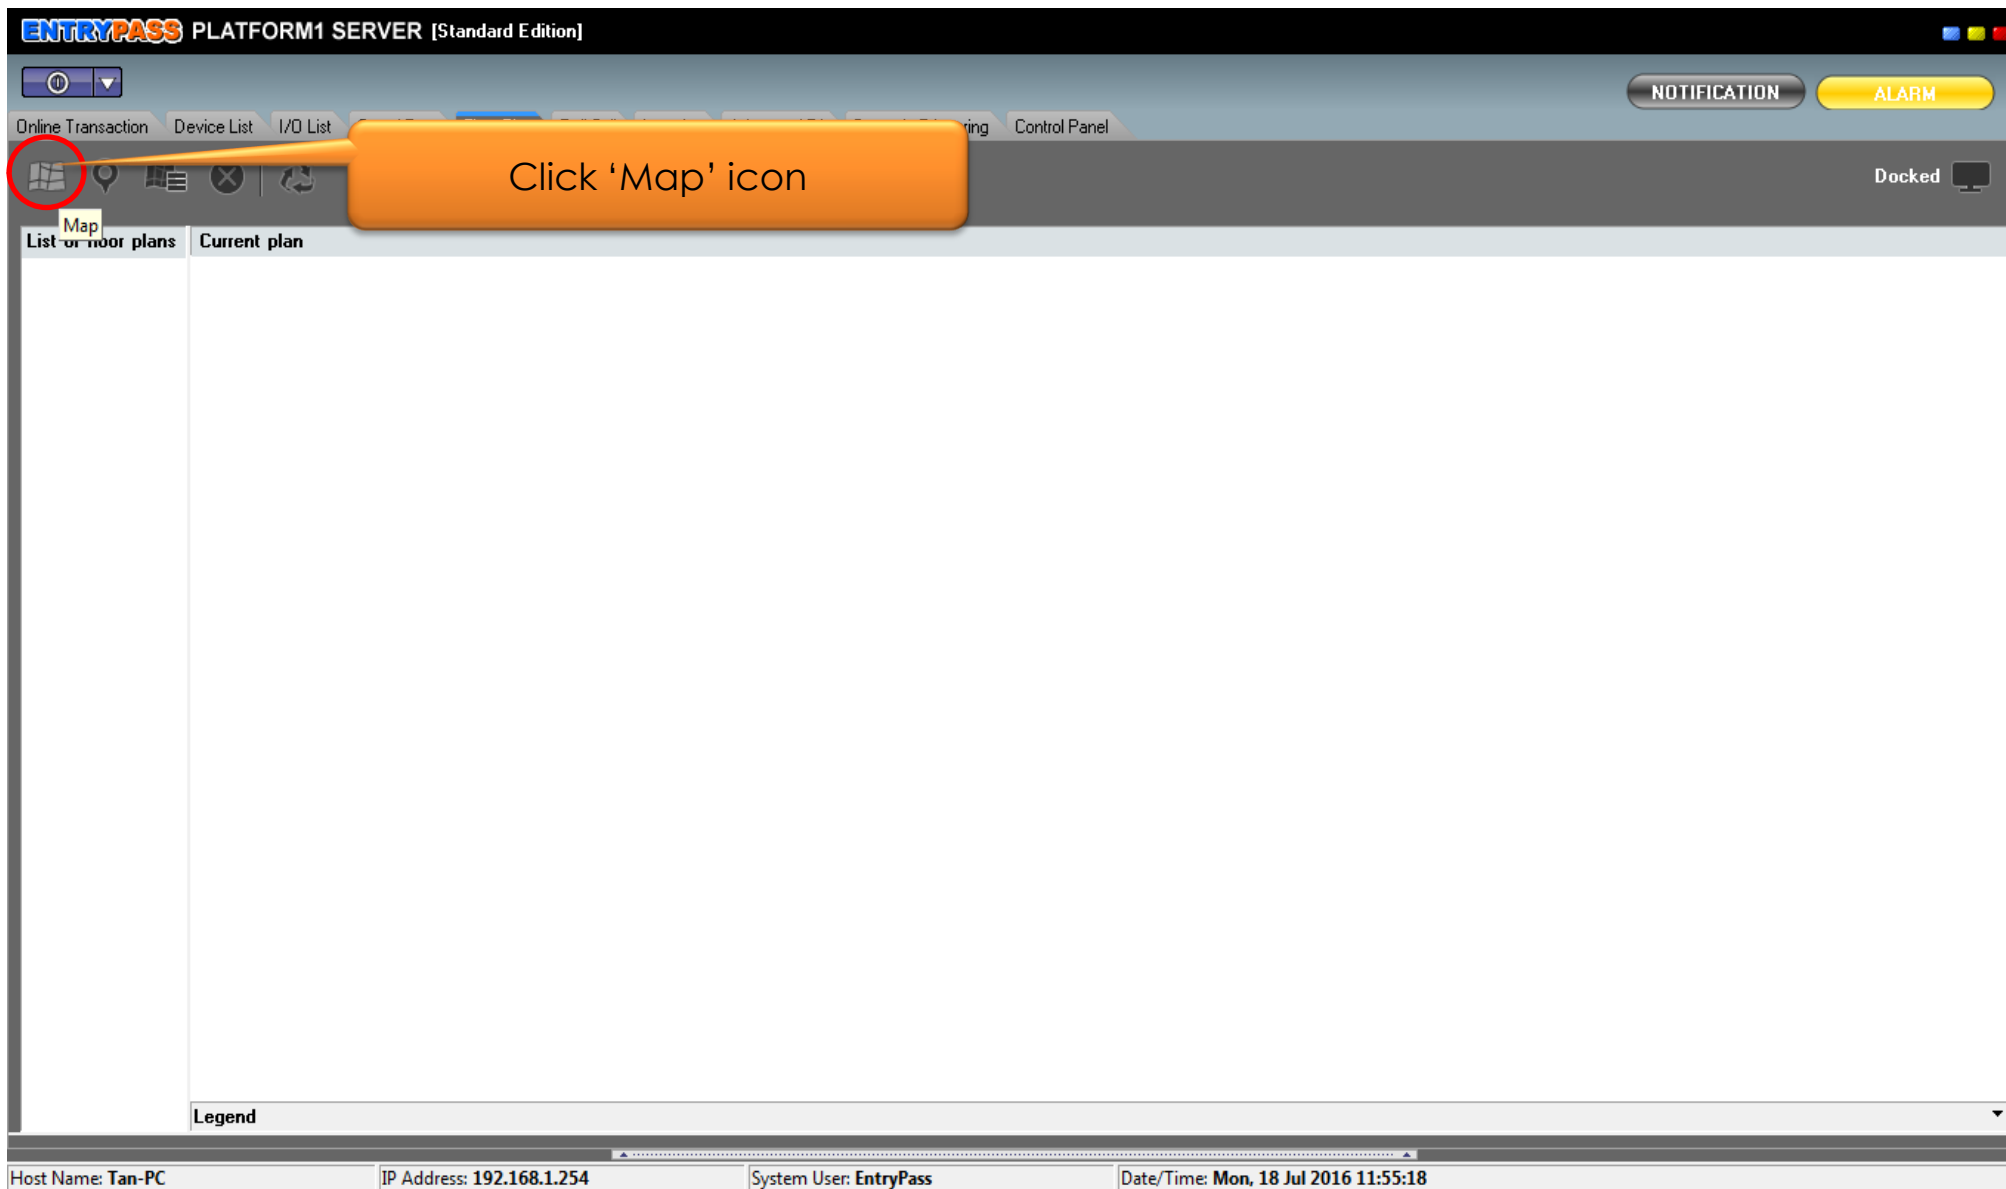


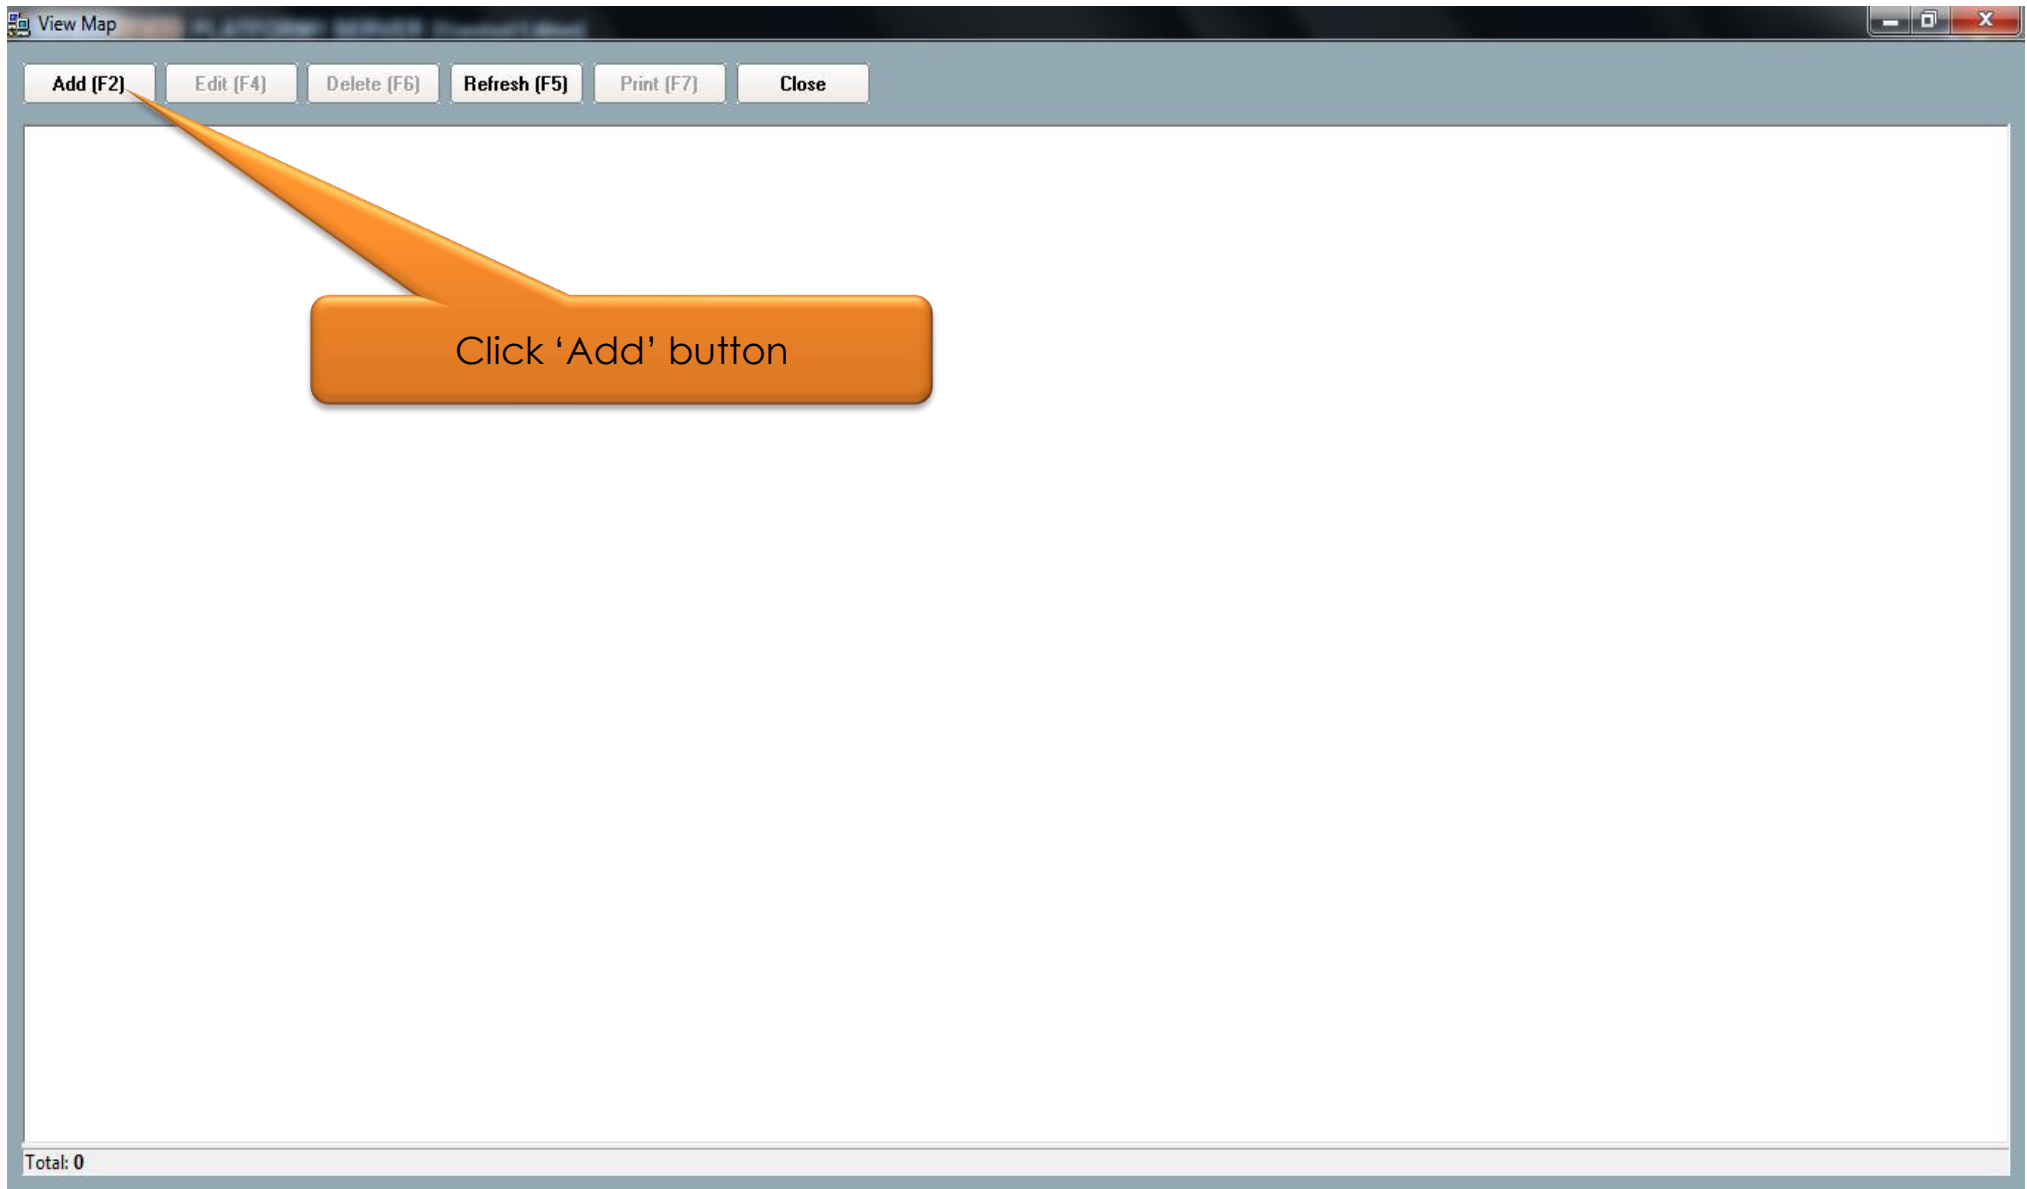


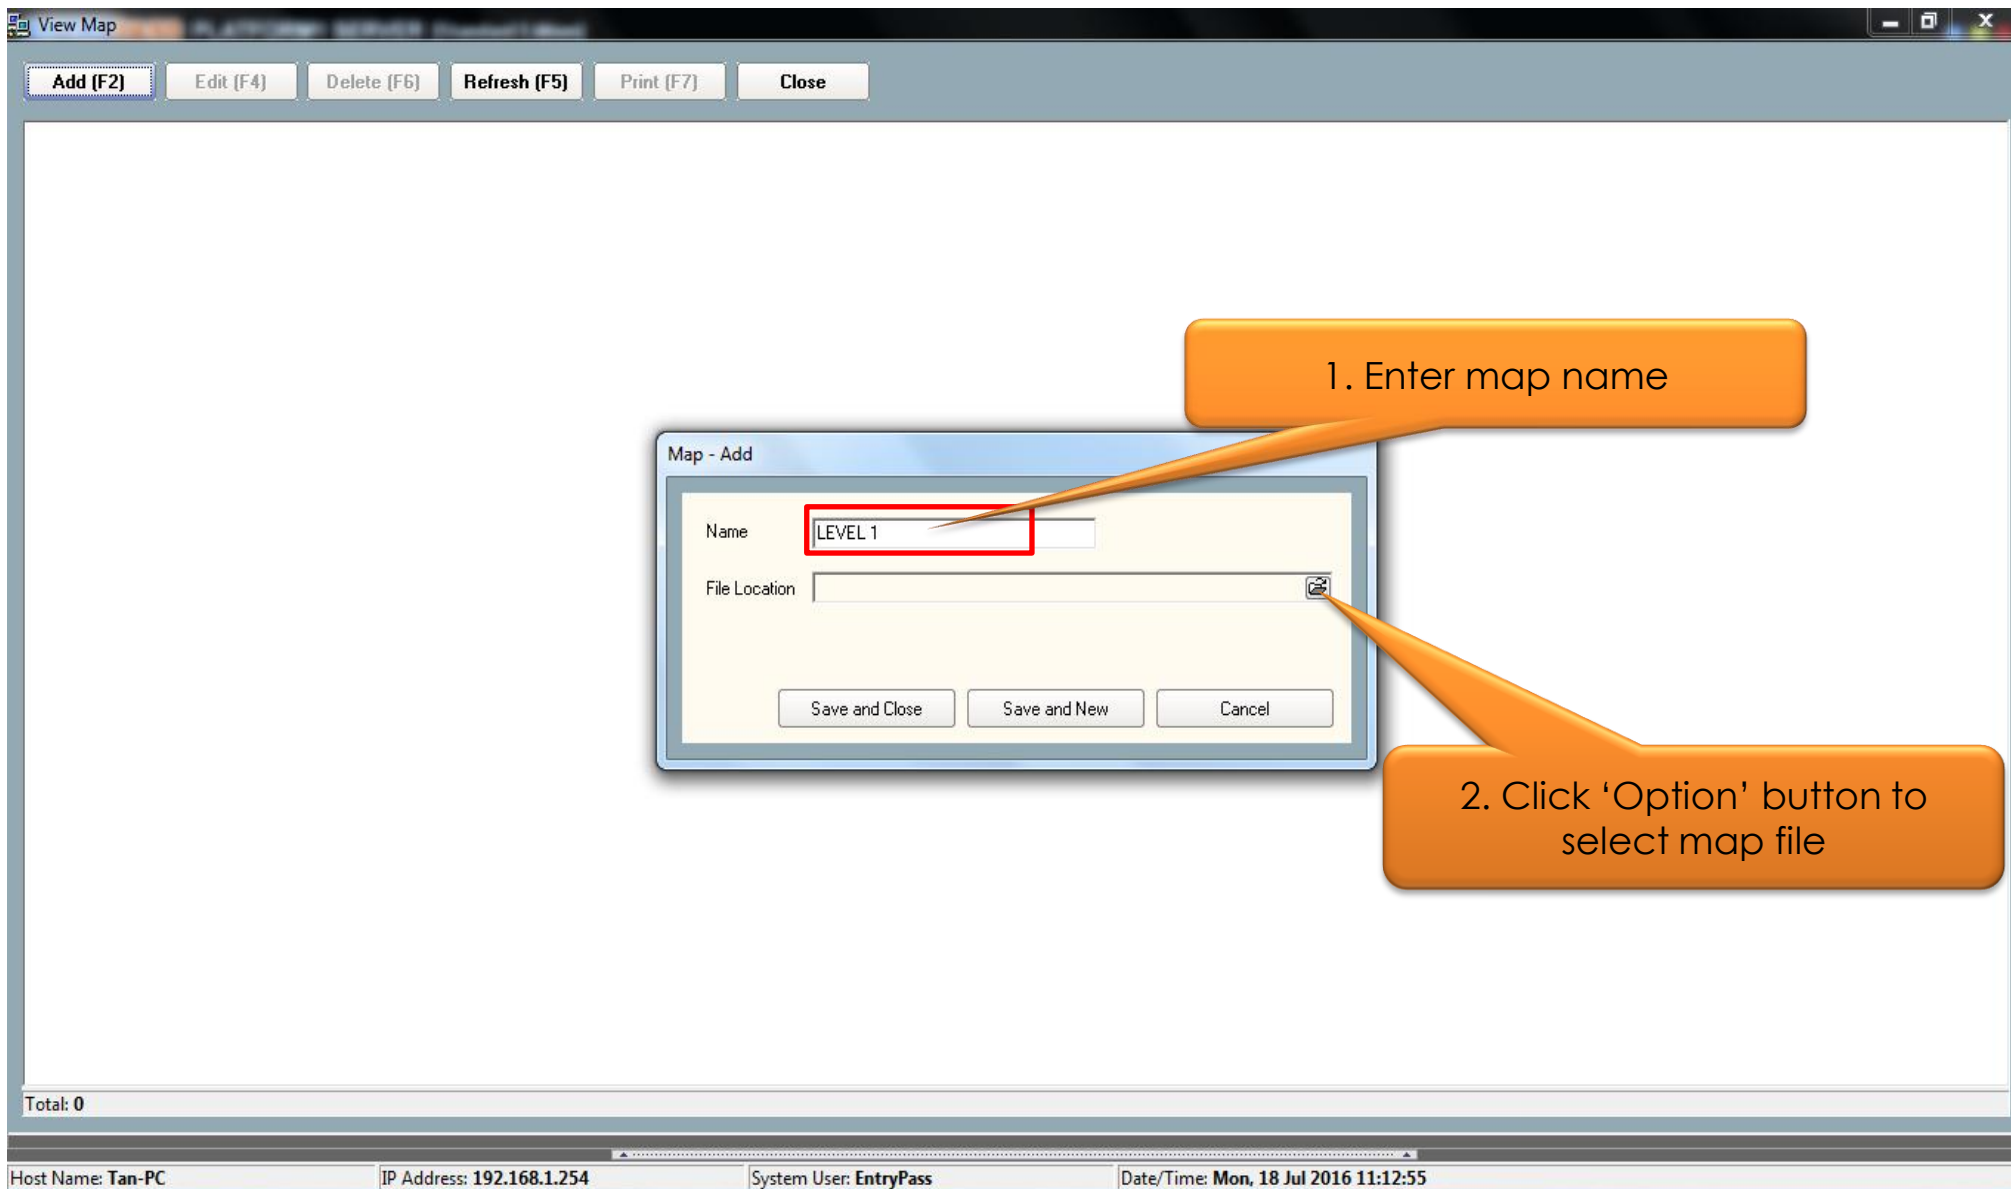

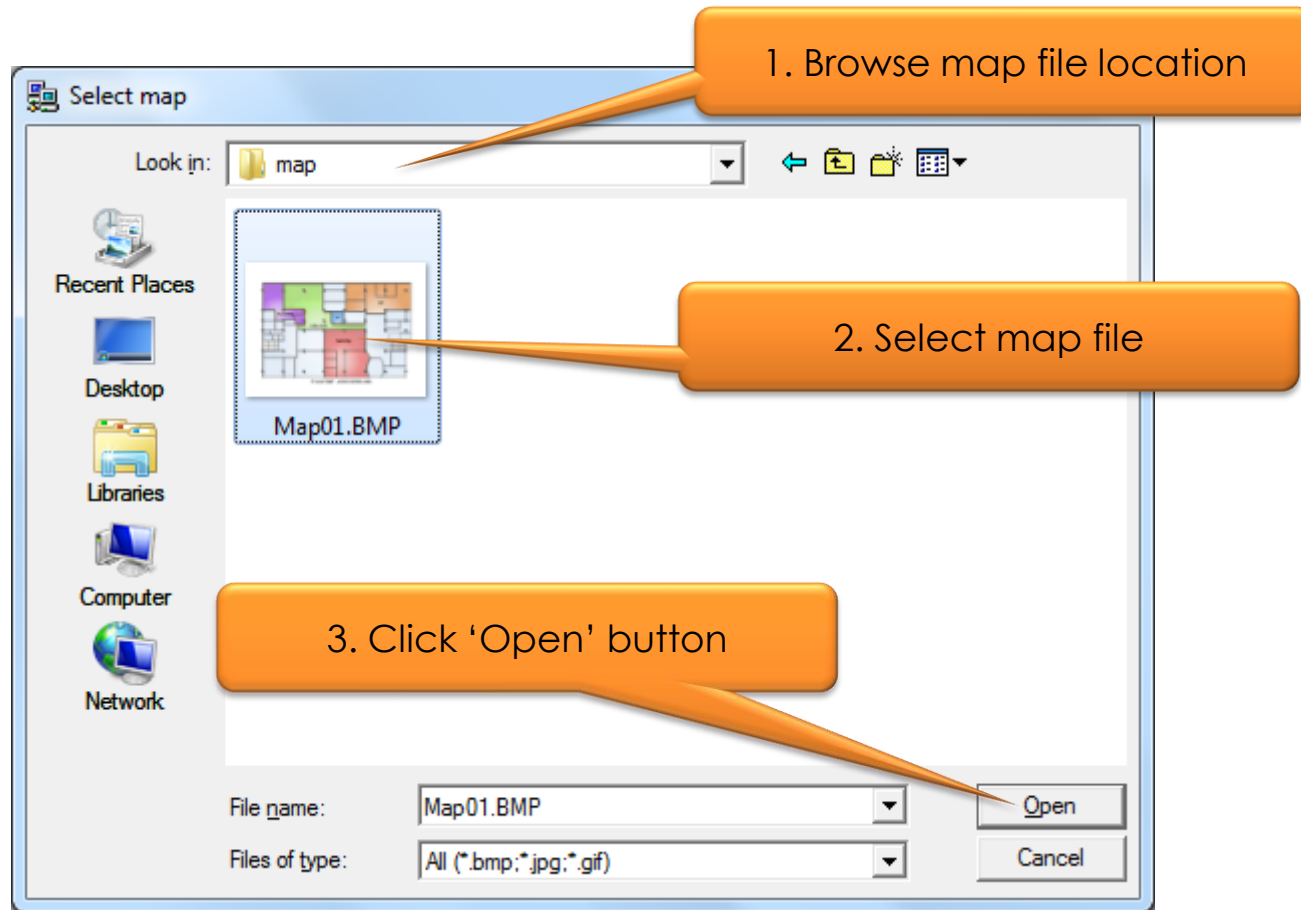



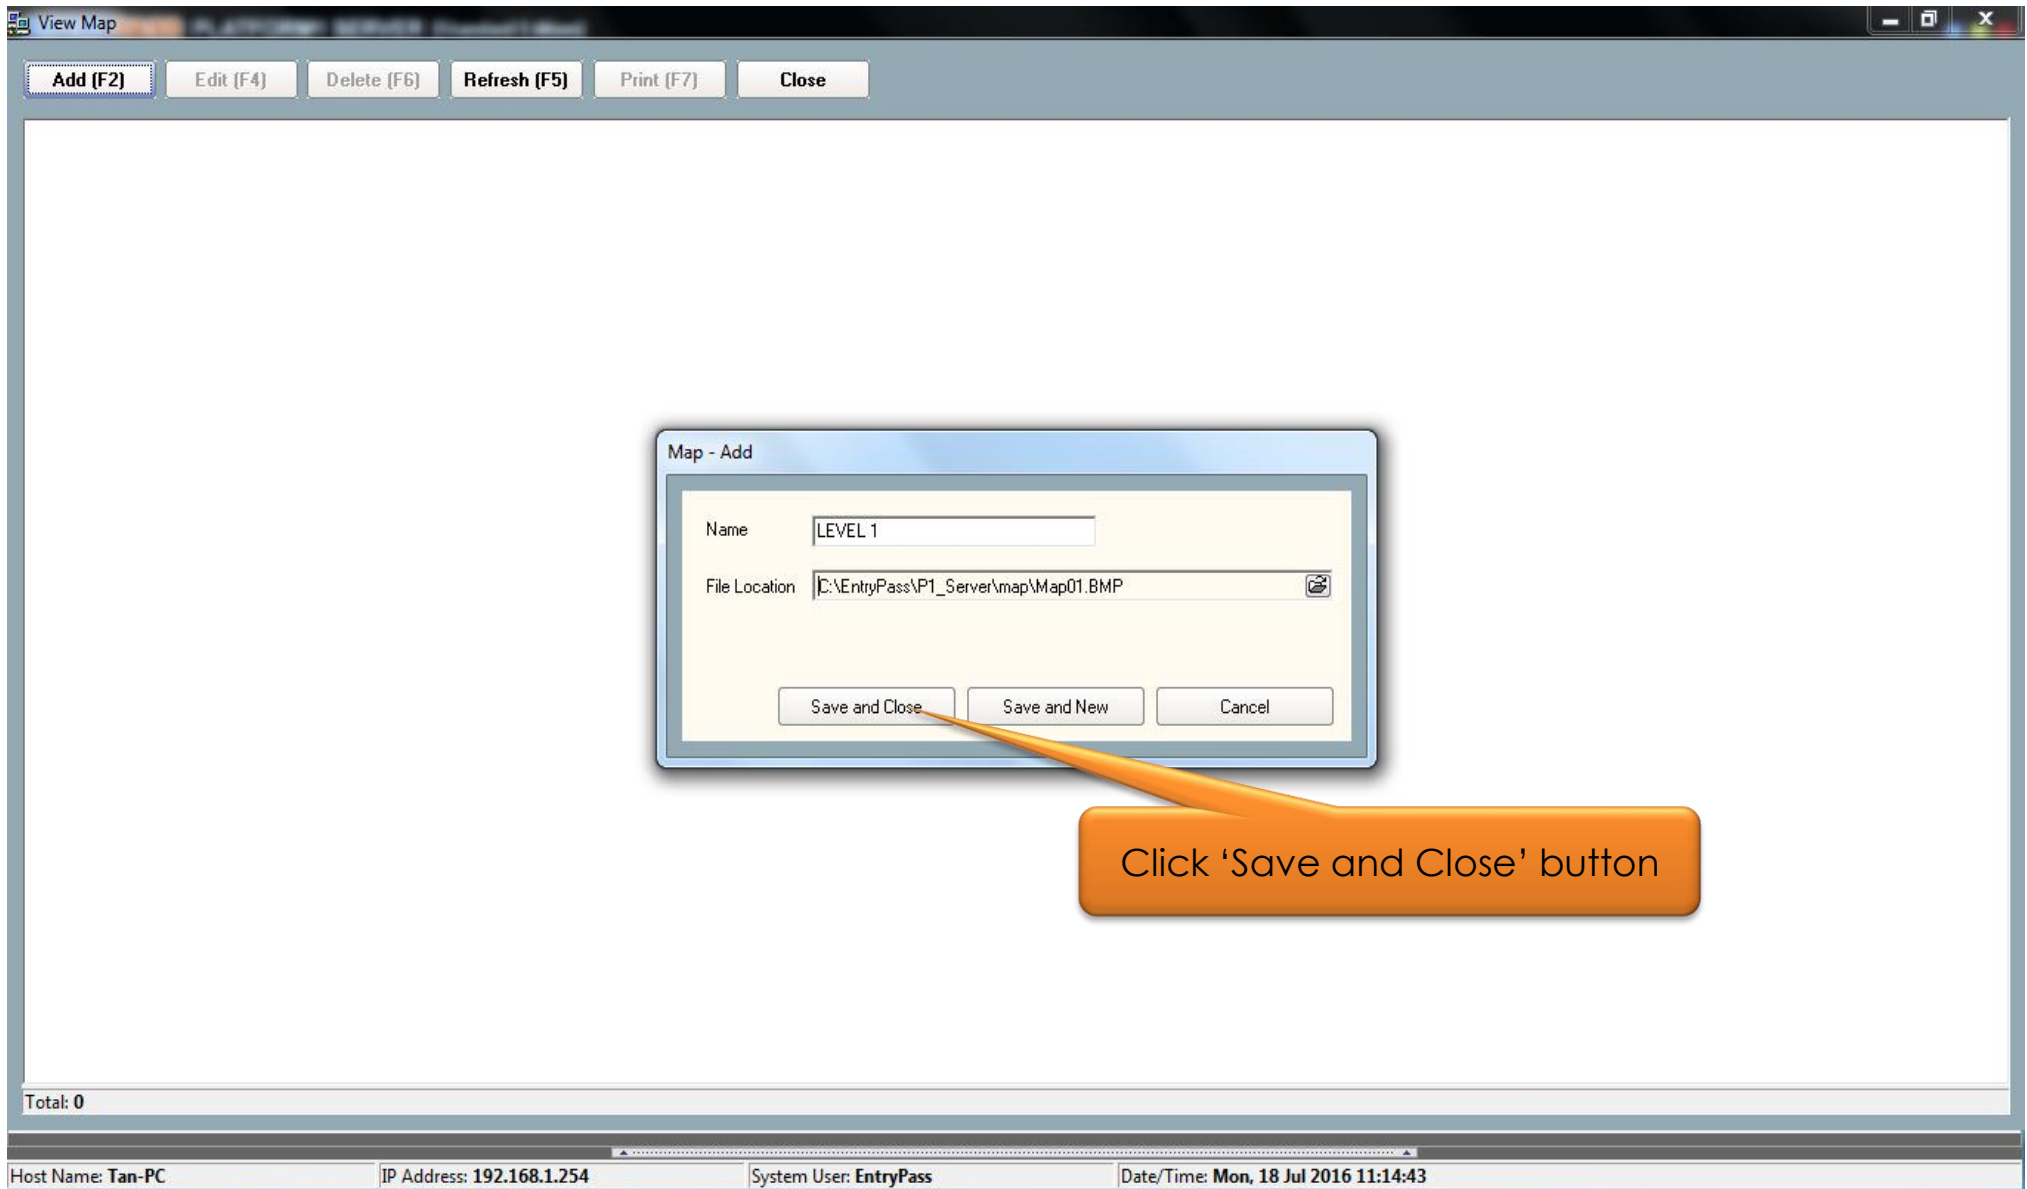

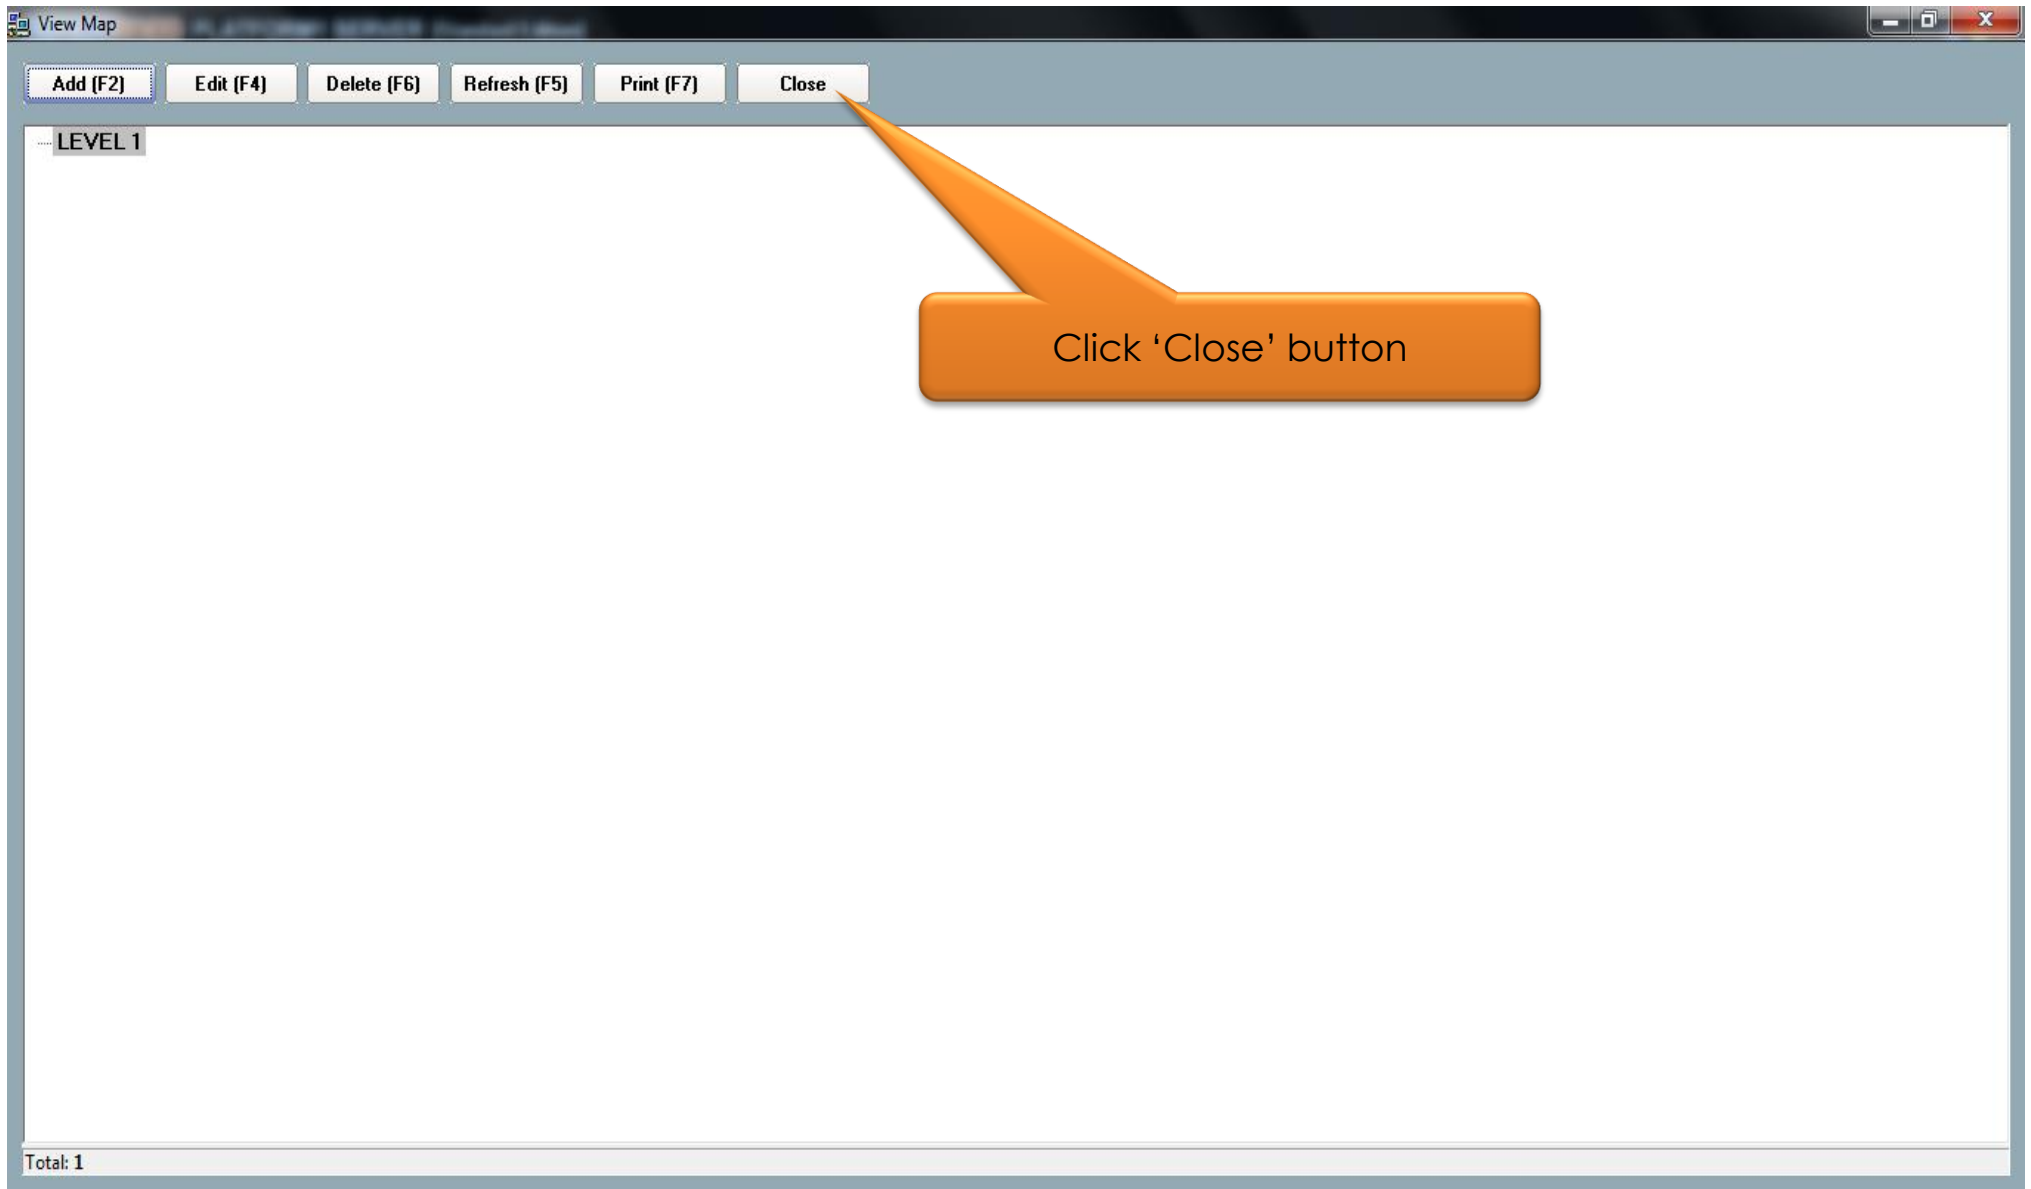

ENTRYPASS PLATFORM1 SERVER [Standard Edition]

Online Transaction Device List I/O List Guard T Control Panel

NOTIFICATION ALARM

Click 'Point' icon

List of floor plans Current plan

LEVEL 1

Accounting

Lobby Area

IT

Marketing

RVI

PT ALUN TEBET - ACCESS CONTROL AREA

Legend

Host Name: Tan-PC IP Address: 192.168.1.254 System User: EntryPass Date/Time: Mon, 18 Jul 2016 11:16:18

Docked

The image shows a screenshot of the EntryPass software interface. At the top, the title bar reads 'ENTRYPASS PLATFORM1 SERVER [Standard Edition]'. Below the title bar, there are several menu items: 'Online Transaction', 'Device List', 'I/O List', 'Guard T', and 'Control Panel'. On the right side of the top bar, there are two buttons: 'NOTIFICATION' and 'ALARM'. In the center of the top bar, there is a navigation area with icons for 'Home', 'Point', 'List of floor plans', and 'Current plan'. An orange callout box with a white arrow points to the 'Point' icon, containing the text 'Click 'Point' icon'. Below the navigation area, there is a 'List of floor plans' section with a thumbnail for 'LEVEL 1'. The main area of the interface displays a floor plan diagram for 'PT ALUN TEBET - ACCESS CONTROL AREA'. The floor plan is divided into several colored sections: Accounting (purple), Lobby Area (green), IT (blue), Marketing (red), and RVI (orange). The floor plan also shows various rooms, corridors, and stairwells. At the bottom of the interface, there is a status bar with the following information: 'Host Name: Tan-PC', 'IP Address: 192.168.1.254', 'System User: EntryPass', and 'Date/Time: Mon, 18 Jul 2016 11:16:18'. On the far right of the status bar, there is a 'Docked' indicator.



**ENTRYPASS PLATFORM1 SERVER [Standard Edition]**

Online Transaction | Device List | I/O List | Guard Tour | **Floor Plan** | Roll Call | Location | Advanced TA | Dynamic Triggering | Control Panel

NOTIFICATION | ALARM

Windows icons | Docked

List of floor plans | Current plan

LEVEL 1 | Unknown

The floor plan shows various rooms: Accounting (purple), Lobby Area (green), IT (blue), and a red area. A Properties dialog box is open over a door, with the following settings:

Parameters	Setting
Type	Door
Controller	OFFICE DOOR
Door	Unknown
Label Position	OFFICE DOOR
Pos X	10
Pos Y	10

Buttons: Update, Hide

Callout bubble: Click controller option to select controller

PT ALUN TEBET - ACCESS CONTROL AREA

Legend

Host Name: Tan-PC | IP Address: 192.168.1.254 | System User: EntryPass | Date/Time: Mon, 18 Jul 2016 11:17:58



**ENTRYPASS PLATFORM1 SERVER [Standard Edition]**

Online Transaction | Device List | I/O List | Guard Tour | **Floor Plan** | Roll Call | Location | Advanced TA | Dynamic Triggering | Control Panel

NOTIFICATION | ALARM

Windows icons | Docked

List of floor plans | Current plan

LEVEL 1 | Unknown

The floor plan shows several rooms: Accounting (purple), Lobby Area (green), IT (blue), and a red area labeled 'Mar'. A Properties dialog box is open over a door, with a callout pointing to the 'MAIN DOOR' option in the 'Door' dropdown menu.

Parameters	Setting
Type	Door
Controller	OFFICE DOOR
Door	Unknown
Label Position	Unknown
Pos X	BACK DOOR
Pos Y	MAIN DOOR

Buttons: Update, Hide

PT ALUN TEBET - ACCESS CONTROL AREA

Legend

Host Name: Tan-PC | IP Address: 192.168.1.254 | System User: EntryPass | Date/Time: Mon, 18 Jul 2016 11:18:14



**ENTRYPASS PLATFORM1 SERVER [Standard Edition]**

Online Transaction | Device List | I/O List | Guard Tour | **Floor Plan** | Roll Call | Location | Advanced TA | Dynamic Triggering | Control Panel

NOTIFICATION | **ALARM**

Windows icons | Docked

List of floor plans | **Current plan**

LEVEL 1 | MAIN DOOR

**Properties**

Parameters	Setting
Type	Door
Controller	OFFICE DOOR
Door	MAIN DOOR
Label Position	Bottom
Pos X	10
Pos Y	10

Update | Hide

Click 'Update' button

PT ALUN TEBET - ACCESS CONTROL AREA

Legend

Host Name: Tan-PC | IP Address: 192.168.1.254 | System User: EntryPass | Date/Time: Mon, 18 Jul 2016 11:22:31



**ENTRYPASS PLATFORM1 SERVER [Standard Edition]**

Online Transaction | Device List | I/O List | Guard Tour | **Floor Plan** | Roll Call | Location | Advanced TA | Dynamic Triggering | Control Panel

NOTIFICATION | **ALARM**

Windows icons | Docked

List of floor plans | **Current plan**

LEVEL 1 | MAIN DOOR

**Properties**

Parameters	Setting
Type	Door
Controller	OFFICE DOOR
Door	MAIN DOOR
Label Position	Bottom
Pos X	10
Pos Y	10

Update | **Hide**

Accounting | Lobby Area | IT

**PT ALUN TEBET - ACCESS CONTROL AREA**

Legend

Host Name: Tan-PC | IP Address: 192.168.1.254 | System User: EntryPass | Date/Time: Mon, 18 Jul 2016 11:20:20

Click 'Hide' button



List of floor plans




LEVEL 1

Current plan



MAIN DOOR

Select the door icon

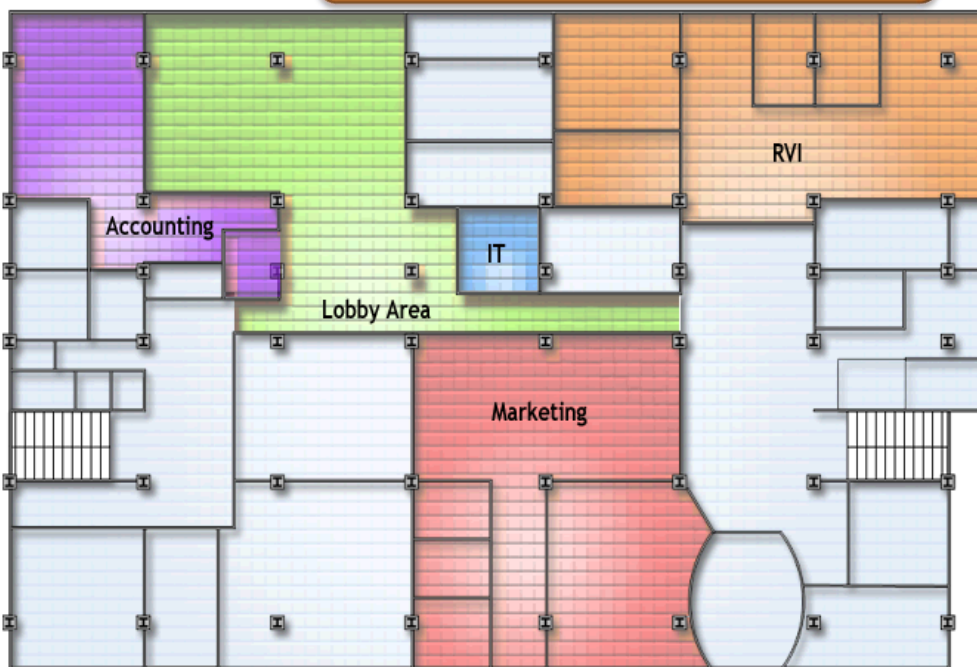

PT ALUN TEBET - ACCESS CONTROL AREA

Legend





**ENTRYPASS PLATFORM1 SERVER [Standard Edition]**

Online Transaction | Device List | I/O List | Guard Tour | **Floor Plan** | Roll Call | Location | Advanced TA | Dynamic Triggering | Control Panel

NOTIFICATION | ALARM

Windows icons | Docked

List of floor plans | Current plan

LEVEL 1

Accounting

Lobby Area

IT

Marketing

MAIN DOOR

PT ALUN TEBET - ACCESS CONTROL AREA

Legend

Host Name: Tan-PC | IP Address: 192.168.1.254 | System User: EntryPass | Date/Time: Mon, 18 Jul 2016 11:23:41

**Notes:** Repeat the steps from page 11 to page 17 for all the doors point





Click 'Exit Edit Mode' icon

List of floor plans Cur Exit Edit Mode



PT ALUN TEBET - ACCESS CONTROL AREA

Legend



**ENTRYPASS PLATFORM1 SERVER [Standard Edition]**

Online Transaction | Device List | I/O List | Guard Tour | **Floor Plan** | Roll Call | Location | Advanced TA | Dynamic Triggering | Control Panel

NOTIFICATION | **ALARM**

Docked

List of floor plans | Current plan

LEVEL 1

PT ALUN TEBET - ACCESS CONTROL AREA

Legend

Host Name: Tan-PC | IP Address: 192.168.1.254 | System User: EntryPass | Date/Time: Mon, 18 Jul 2016 11:25:37



# APPENDIX



# Appendix A: Valid Card Swipe Status

The screenshot displays the ENTRYPASS PLATFORM1 SERVER [Standard Edition] interface. The top navigation bar includes tabs for Online Transaction, Device List, I/O List, Guard Tour, Floor Plan (selected), Roll Call, Location, Advanced TA, Dynamic Triggering, and Control Panel. On the right, there are buttons for NOTIFICATION and ALARM. Below the navigation bar, there are icons for window management and a 'Docked' status indicator. The main area shows a 'List of floor plans' with 'LEVEL 1' selected, and a 'Current plan' view of a floor plan for 'PT ALUN TEBET - ACCESS CONTROL AREA'. The floor plan is color-coded and includes rooms labeled Accounting, IT, Lobby Area, Marketing, and RVI. It also features a 'MAIN DOOR' and a 'BACK DOOR'. A legend is visible at the bottom left of the floor plan area. The status bar at the bottom shows Host Name: Tan-PC, IP Address: 192.168.1.254, System User: EntryPass, and Date/Time: Mon, 18 Jul 2016 11:27:16.



# Appendix B: Door Left Open Status

The screenshot displays the ENTRYPASS PLATFORM1 SERVER [Standard Edition] interface. At the top, there are navigation tabs: Online Transaction, Device List, I/O List, Guard Tour, Floor Plan (selected), Roll Call, Location, Advanced TA, Dynamic Triggering, and Control Panel. A notification bar on the right contains 'NOTIFICATION' and 'ALARM' buttons. Below the navigation is a toolbar with icons for window management and a 'Docked' status indicator.

The main area shows a 'List of floor plans' on the left with 'LEVEL 1' selected. The 'Current plan' is a detailed floor plan for 'PT ALUN TEBET - ACCESS CONTROL AREA'. The plan is color-coded by department: Accounting (purple), IT (blue), Lobby Area (green), Marketing (red), and RVI (orange). Two doors are highlighted: 'MAIN DOOR' in blue and 'BACK DOOR' in yellow. The floor plan also shows various rooms, corridors, and stairwells.

At the bottom of the interface, a status bar provides system information: Host Name: Tan-PC, IP Address: 192.168.1.254, System User: EntryPass, and Date/Time: Mon, 18 Jul 2016 11:27:49.



# Appendix C: Door Force Open Status

The screenshot displays the ENTRYPASS PLATFORM1 SERVER [Standard Edition] interface. The main window shows a floor plan for Level 1, which is color-coded by department: Accounting (purple), Lobby Area (green), IT (blue), Marketing (red), and RVI (orange). Key locations are labeled: MAIN DOOR (blue), BACK DOOR (yellow), and PT ALUN TEBET - ACCESS CONTROL AREA (red). The interface includes a navigation menu with options like Online Transaction, Device List, I/O List, Guard Tour, Floor Plan, Roll Call, Location, Advanced TA, Dynamic Triggering, and Control Panel. A notification bar at the top right shows NOTIFICATION and ALARM buttons. The status bar at the bottom displays Host Name: Tan-PC, IP Address: 192.168.1.254, System User: EntryPass, and Date/Time: Mon, 18 Jul 2016 11:28:17.



THANK YOU

