


Simple Diagram For Lift Access System

Design 1 – L3800 and HIO all located in the lift car top

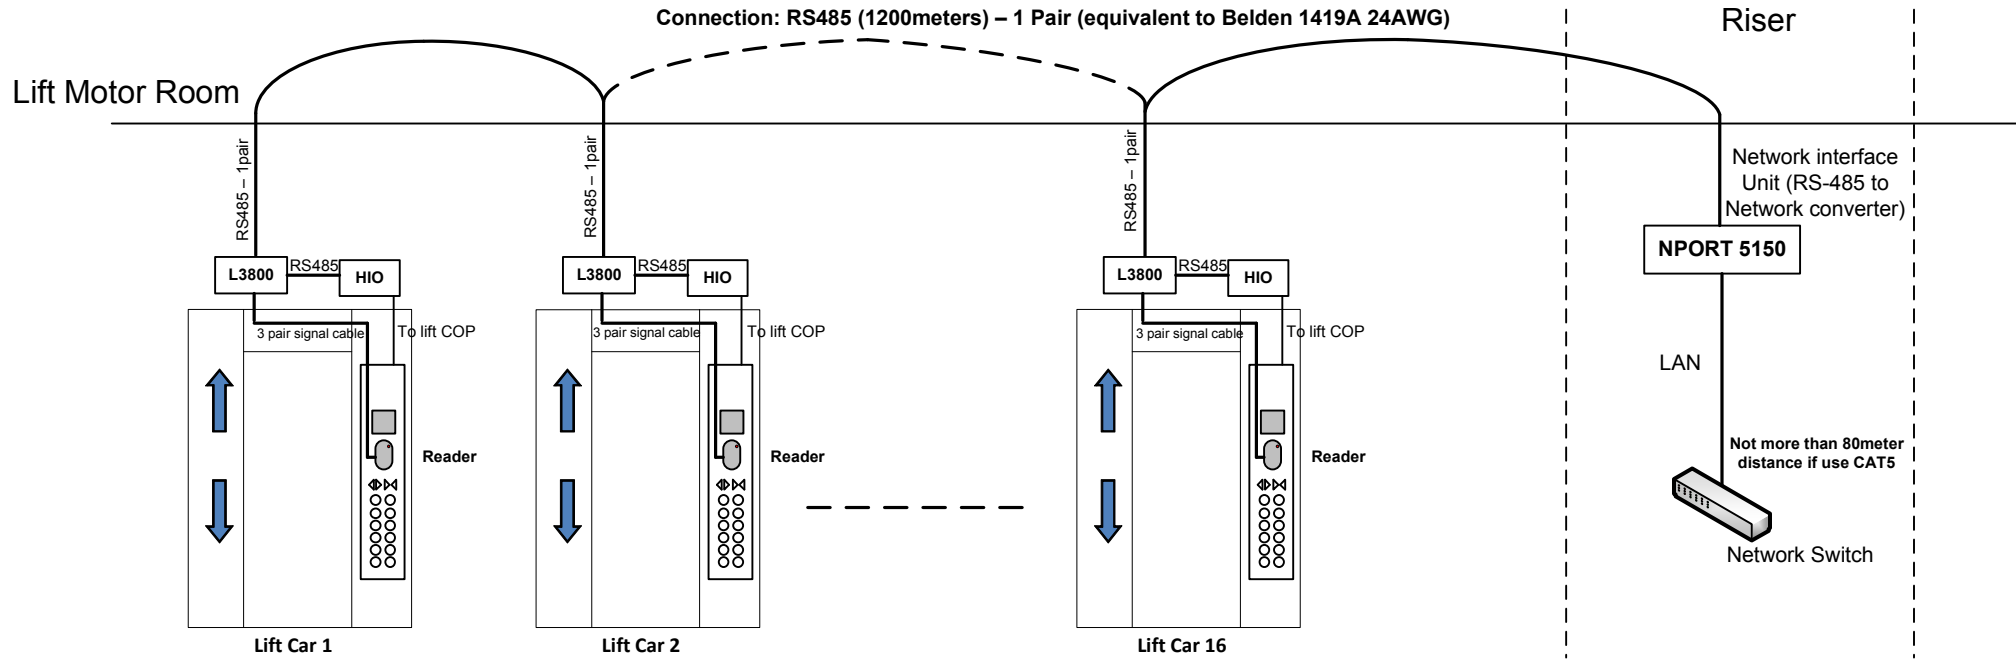

Design 2 – L3800 located in the lift car top and HIO located in the motor room (next to Lift panel which come with the interface input)

